

INSTRUCTIONS 730309 Rev. D

Surge-Trap[®] Pluggable SPD for Photovoltaic Applications



DANGER

Hazard of Electric Shock, Burn or Explosion

- This equipment must be installed and serviced only by qualified electrical personnel in accordance with national and local electrical codes.
- Turn off all power supplying this equipment before working on equipment.
- Always use a properly rated voltage-sensing device to confirm power is off.
- Replace all devices, doors and covers before restoring power to this equipment.
- Do not apply petroleum-based products to non-metallic parts.

Improper installation or misapplication of these devices may result in serious injury to the installer and/or damage to electrical system or related equipment. Protective eye wear and clothing should be worn whenever working around hazardous voltages.

Failure to follow these instructions could result in serious injury or death.




CAUTION


- Do not attempt to open or tamper the Surge-Trap device in any way as this may compromise performance and will void the warranty.
- Megger and hi-potential tests may damage the device. Disconnect all power supplying the equipment and isolate the Surge-Trap device before testing.
- Prior to installation, confirm that the Surge-Trap is rated for the correct voltage, current and frequency equivalent to the application.
- Surge-Trap must be installed within an enclosure or control cabinet.
- Operating and storage temperature of this device must be within -40°C and +85°C.



PLUG MEASUREMENTS

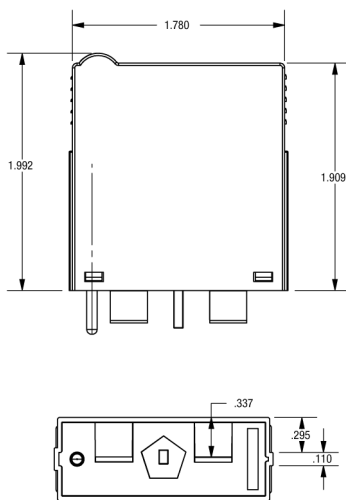

BASE MEASUREMENTS

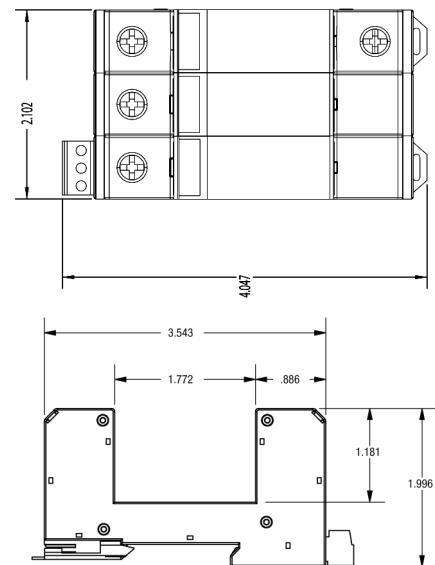

USA T 978 462 6662 F 978 462 0181 info.nby@mersen.com
374 Merrimac Street, Newburyport, MA 01950

CANADA T 416 252 9371 F 416 252 6572 sales.tor@mersen.com
6200 Kestrel Road, Toronto, Ontario, Canada L5T 1Z1

ep.mersen.com




INSTRUCTIONS 730309 Rev. D

Surge-Trap® Pluggable SPD for Photovoltaic Applications

PRODUCT CHARACTERISTICS


1. Mounting

Surge-Trap is designed to mount onto a 35mm DIN-rail or top-hat rail (standard EN 50022, BS 5584) set in the horizontal position (See Figure 1). To install, first hook the line side over the 35mm DIN-rail and then push in the load side until the spring loaded mounting clip “clicks” onto the rail with the Surge-Trap label text shown in the upright position reading left to right.

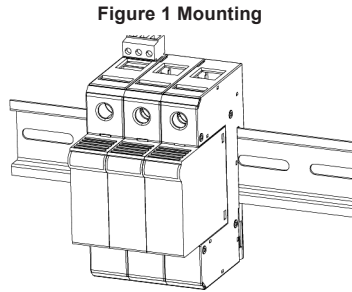

Surge-Trap Pluggable

Figure 2 Visual Indicator

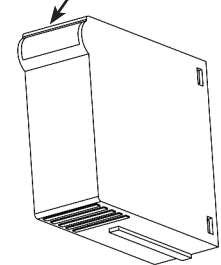

Surge-Trap Pluggable

2. Replacement / Removal

If the blown RED indicator tab is visible on any of the multiple pole units (see Figure 2). To remove, pull the plug out, discard it and replace it with a new one by pushing it into the place of the blown one. The “click” indicates that the plug is set in its place.

3. Auxiliary Micro-Switch Installation

Remote signaling is available on all Surge-Trap products that specify a remote indicator. #16 – #30 AWG signal wire may be used. The maximum continuous current rating for the remote indicator is 3A. If applicable, install signal wiring as shown in Figure 3.


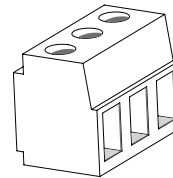


Figure 3 Microswitch

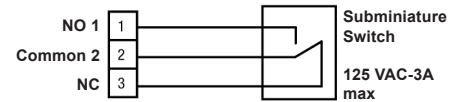

Signal Wire Range: #16 to #30 AWG

- Terminal Torque 2.2 lb-in
- Cont. between Comm + NO = Product Offline, Not Protected
- Cont. between Comm + NC = Product Online, Protected

4. Wire Installation

#6 – #14 AWG, 60/750C Copper wire shall be used. Maximum torque to be applied to terminal screws is 1.7 newton-meter (14.75 in-lb). Strip back wire insulation 6mm (1/4"). Interconnecting wire should be kept at minimum length. Wire bending radius should be > 100mm (4"). Do not loop or twist interconnecting wire. Failure to meet these requirements will result in higher let-through voltages. Surge-Trap is to be installed in parallel with the load or the electrical system wiring. Determine electrical voltage configuration and proper modes of protection and install wiring as shown in Figure 4 (next page).

NOTE: Surge-Trap SPD does not require any additional overcurrent protection.

WIRING DIAGRAM


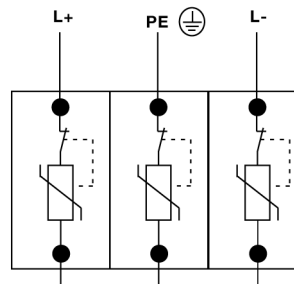


Figure 1 Wiring Diagram

Wire Installation

#6 – #14 AWG, 60/750C Copper wire shall be used. Maximum torque to be applied to terminal screws is 1.7 newton-meter (14.75 in-lb). Strip back wire insulation 6mm (1/4").

Base & Voltage Key Orientation

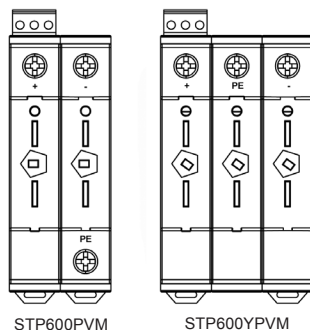

STP600PVM

STP600YPM



USA T 978 462 6662 F 978 462 0181 info.nby@mersen.com
374 Merrimac Street, Newburyport, MA 01950

CANADA T 416 252 9371 F 416 252 6572 sales.tor@mersen.com
6200 Kestrel Road, Toronto, Ontario, Canada L5T 1Z1

ep.mersen.com

MERSEN
Ferraz Shawmut is Mersen